 


SMOKER BOX

Model # 3561

INSTALLER: Leave these instructions with consumer.
CONSUMER: Retain for future reference.

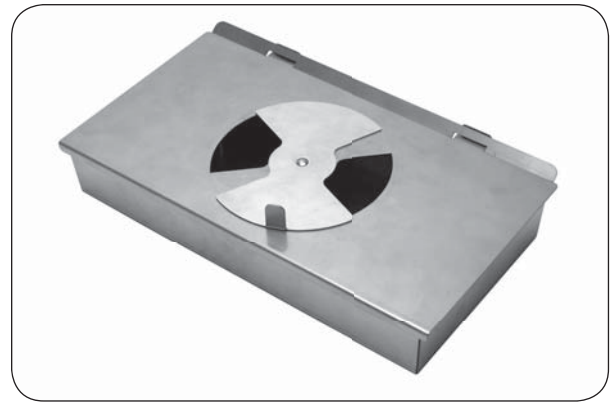

The RH Peterson Smoker Box is designed to be used on any Fire Magic and AOG grill. To install, follow steps below.

Note: This smoker box is designed for use over main burners with flavor grids / vaporizer panels only. **DO NOT USE OVER INFRARED BURNERS.**

Observe all safety information in your grill owner's manual and all warnings supplied with your wood chip/chunks.

CAUTION: Ensure grill is completely cool and knobs are in the OFF position.

1. Remove cooking grid from main burner where you wish to set smoker box.

2. Load wood chips/chunks into smoker box (see Fig. 1-1).

Note: Wood can be pre-soaked if desired.

3. Close lid and fully open the air shutter (see Fig. 1-1).

4. Place smoker box directly onto flavor grid / vaporizer panel (see Fig. 1-2).

5. Light burner under the smoker box. Keep burner on **HI LIGHT** setting for approximately 10 minutes or until a steady amount of smoke is rising. Then turn to **LOW** setting and close air shutter to adjust to desired amount of smoke. Cook as desired.

Note: A full basket can produce smoke for up to 45 minutes.

CAUTION: THE SMOKER BOX WILL BE HOT.

CAUTION: Wear heat resistant gloves when handling hot smoker box.

CAUTION: Use caution when replenishing wood chunks/chips.

CLEANING

When the chips/chunks are completely extinguished and the unit has cooled down, remove smoker box from the grill and empty ash into a fireproof container.

Clean burners and igniters as needed. Inspect burners and igniters every time you use smoker box.

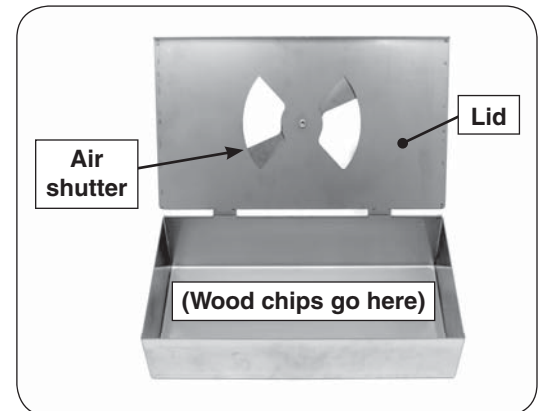


Fig. 1-1 Smoker box open

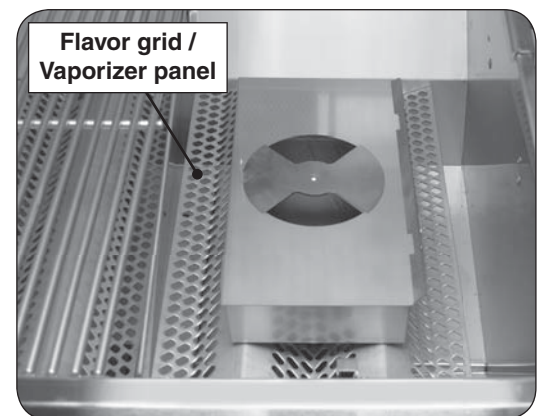


Fig. 1-2 Smoker box in grill