




ECHELON DIAMOND THERMOMETER QUICK START GUIDE

This guide serves as a **supplement** to the thermometer information found in your grill main instructions. Read all instructions completely and carefully prior to product use.


YOU MUST READ THE ORIENTATION SECTION PRIOR TO DIGITAL THERMOMETER OPERATION.

I ORIENTATION


Familiarize yourself with the **thermometer, master switch, meat probe, and default screen.**

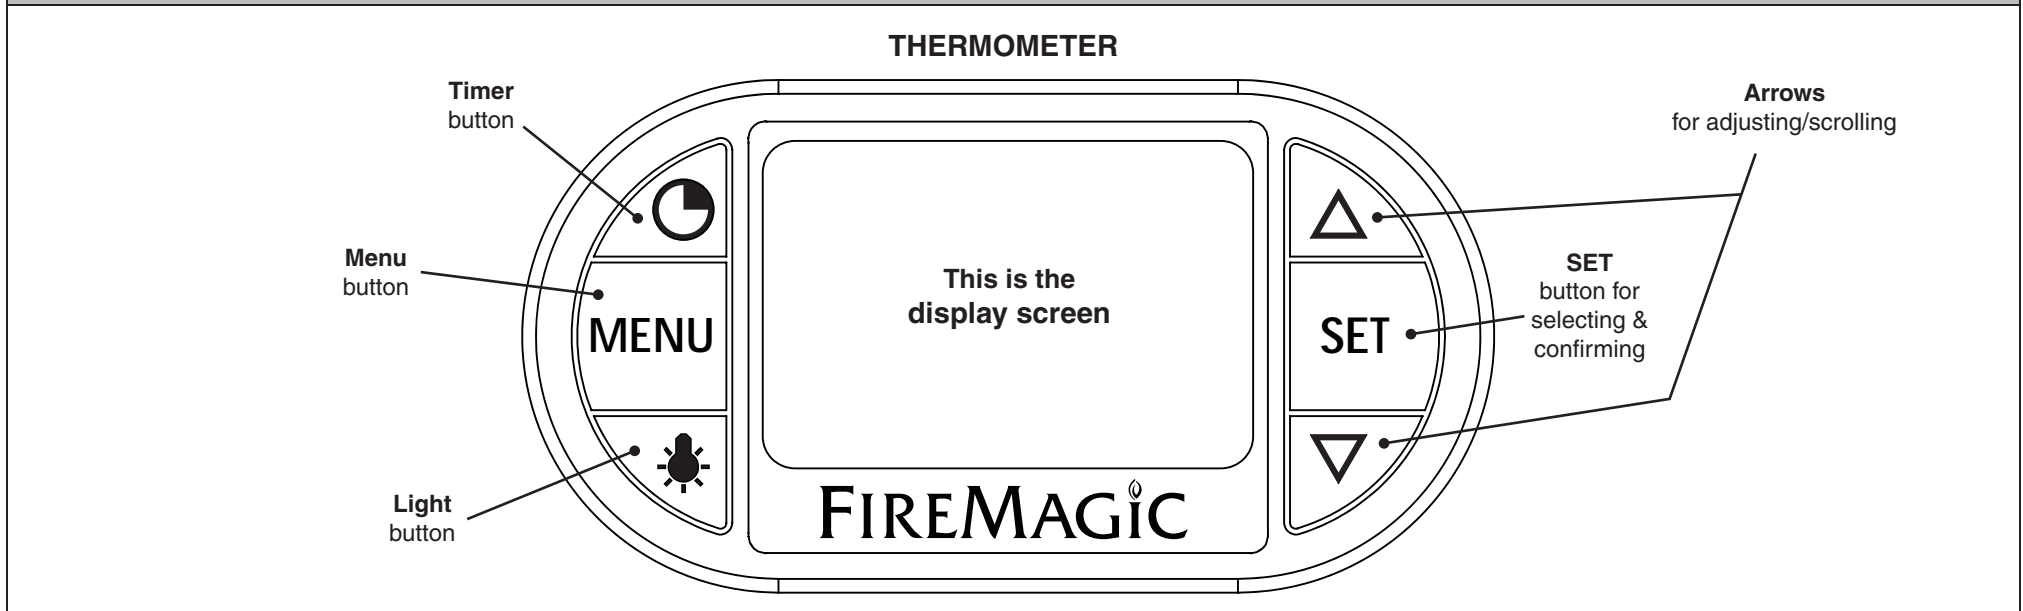

MASTER SWITCH & MEAT PROBE DETAIL

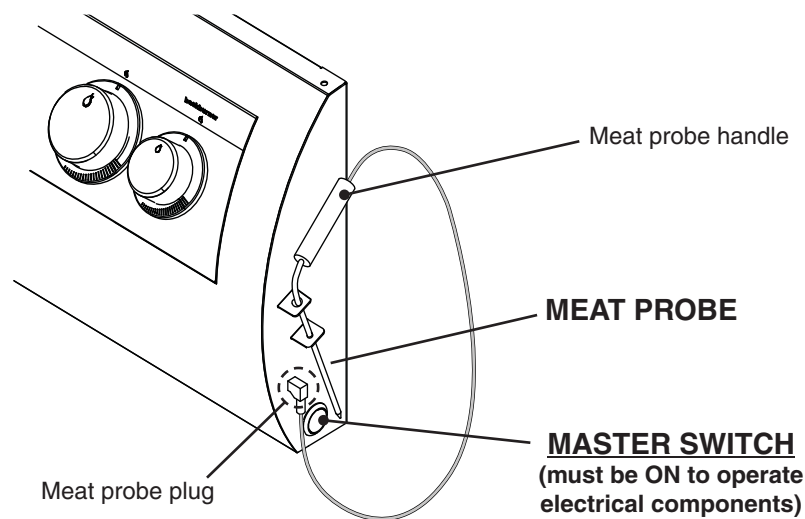


DEFAULT SCREEN DETAIL

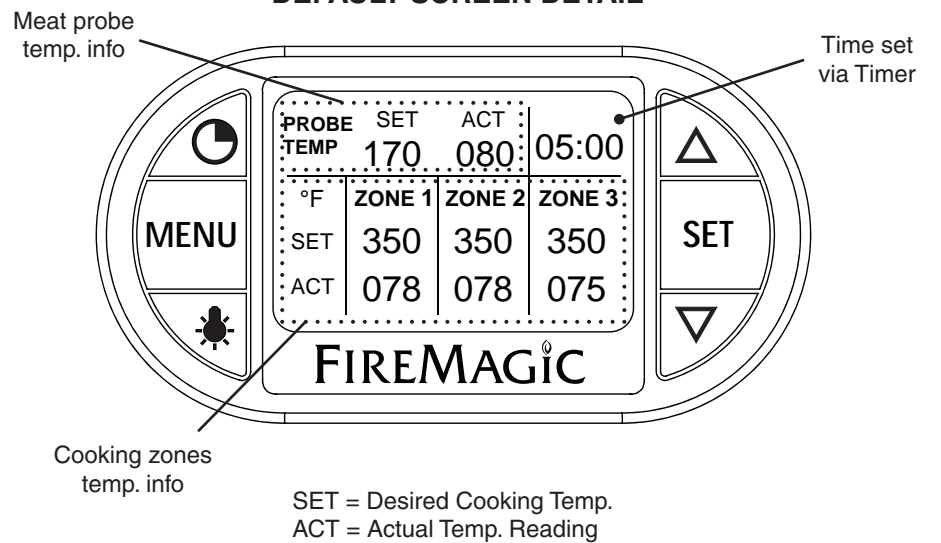


- Master switch** must be turned **ON** for all electrical components on your grill to operate. Turning Master switch off will shut down all electrical components.
- Pressing **any** button will turn on the thermometer. Thermometer will automatically shut off after 5 minutes if no temperature change is detected.
- You must turn thermometer on to turn interior and knob lights on. Automatic thermometer shutdown will not shut off these lights; they must be manually shut off (via the light button) as instructed in this guide.


II INTERIOR AND KNOB LIGHTS

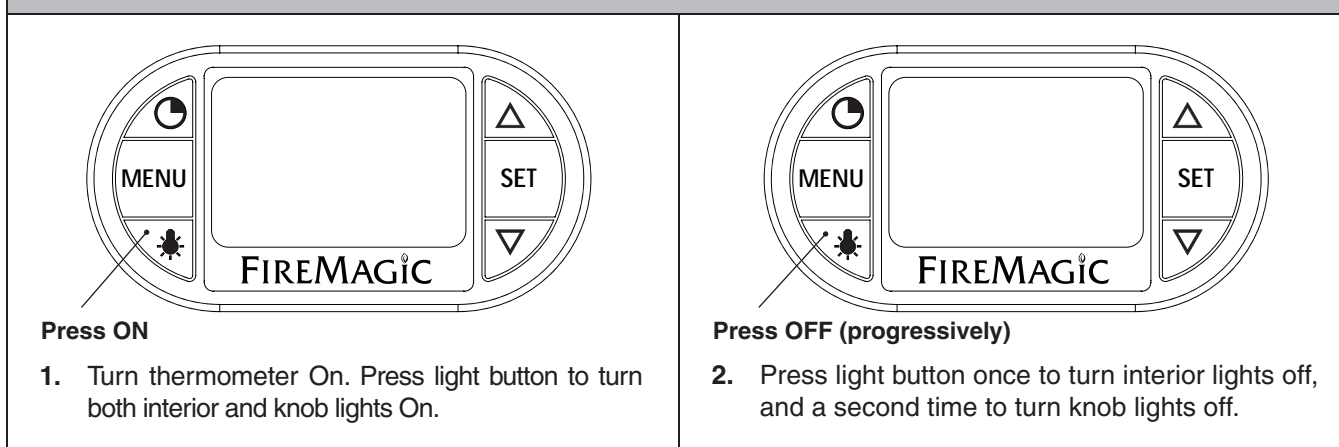

III SET A ZONE AND/OR MEAT PROBE TEMP.

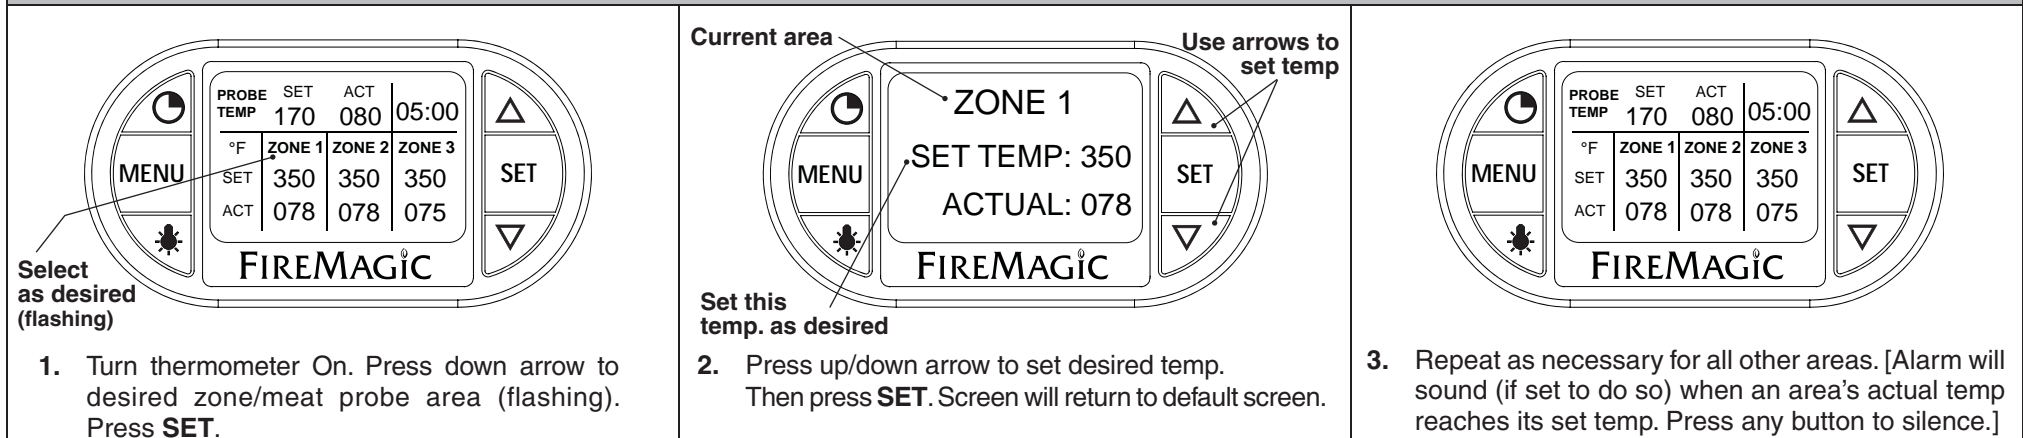


IV GRILL GUIDE AND MEAT PROBE

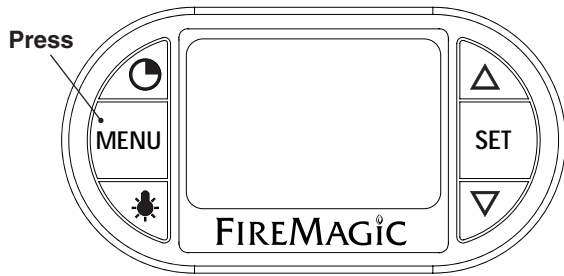


1. Turn thermometer On.
Press **MENU** button.



2. Press down arrow to GRILL GUIDE.
Then press **SET**.

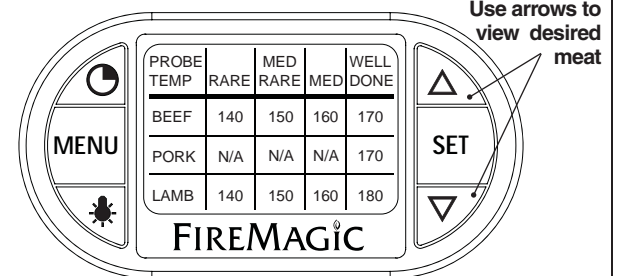


3. Press up/down arrow to view desired meat.
Note temp. and press **SET**.

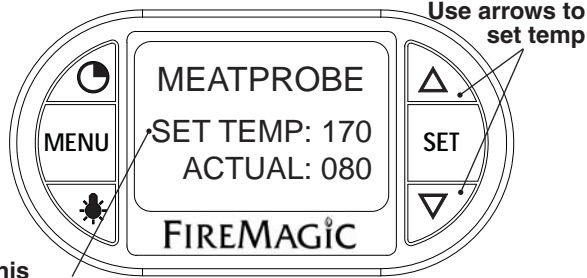


Set this temp. as desired

4. Press up/down arrow to set the noted temp. for the meatprobe. Then press **SET**. Screen will return to default screen.

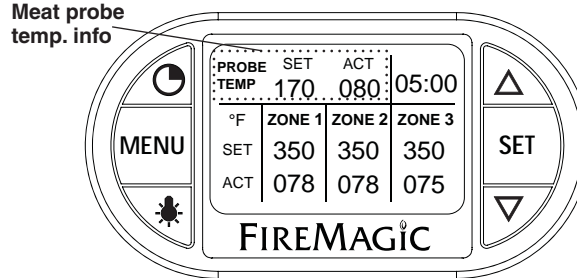


5. Inserting the meat probe into the cooking meat will give an actual temp. reading. [Alarm will sound (if set to do so) when the actual temp reaches the set temp. Press any button to silence.]

V SET TIMER

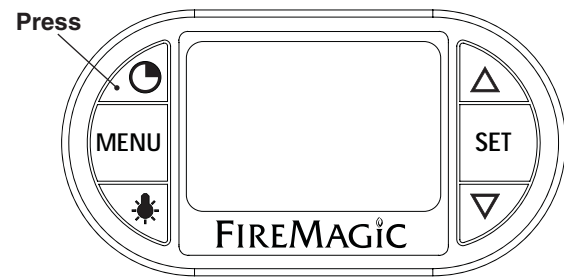


1. Turn thermometer On.
Press the **timer** button.

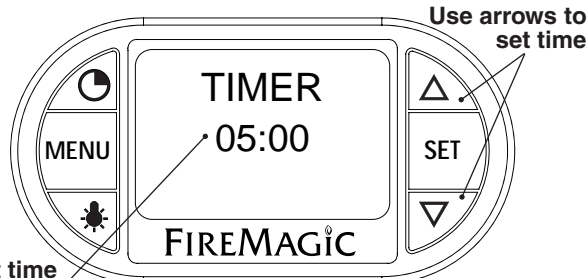


Set time as desired

2. Press up arrow to set desired amount of time.
Then press **SET**. Screen will return to default screen.

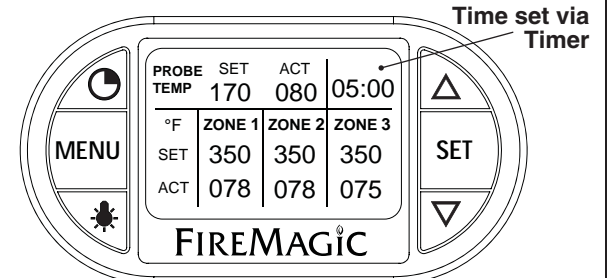


3. Time remaining will show.
(Alarm will sound when the time reaches zero. Press any button to silence.)


VI SET ALARM ON/OFF (ZONES OR MEAT PROBE)

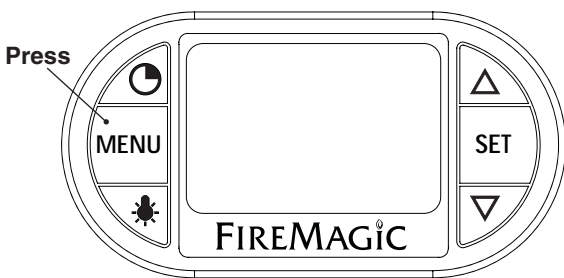

1. Turn thermometer On.
Press the **MENU** button.

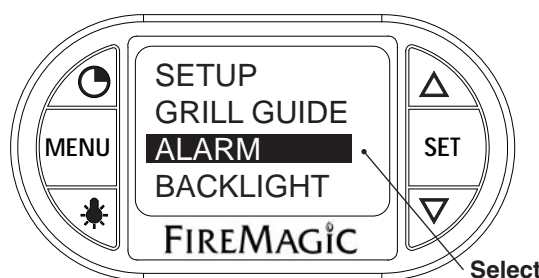

2. Press down arrow to ALARM.
Then press **SET**.

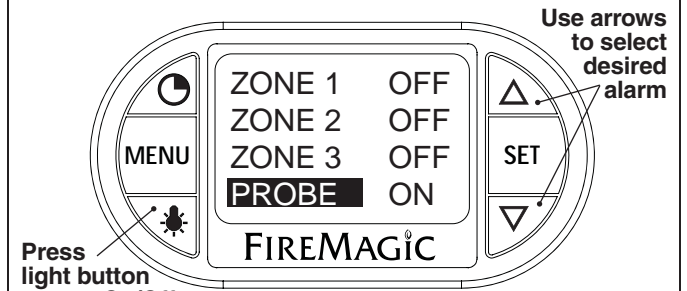

Press light button to turn On/Off

3. Use up/down arrow to select desired alarm, and press **light button** to turn alarm On/Off. Press **SET** to return to menu screen.

VI SET ALARM ON/OFF (CONTINUED)




4. Press **MENU** to return to default screen.

VII SET THERMOMETER BACKLIGHT

• Follow step 1 of the previous section (Alarm), THEN:



1. Press down arrow to BACKLIGHT.
Then press **SET**.

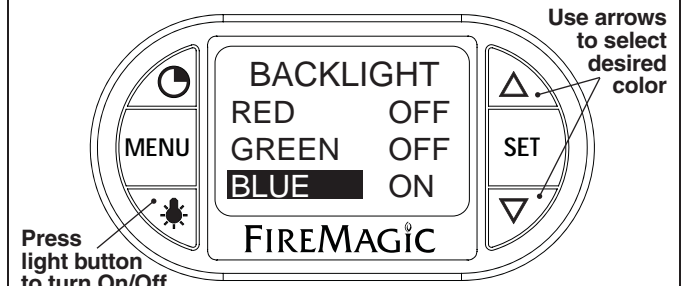

Press light button to turn On/Off

2. Use up/down arrow to select desired color, and press **light button** to turn color On/Off. Press **SET**; screen will return to menu screen. New color will show. Various combinations result in different colors.


VIII CHANGE TEMPERATURE SCALE




1. Turn thermometer On.
Press **MENU** button.



2. Press **SET**.

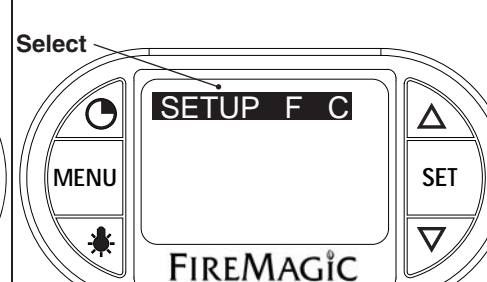

3. Press **SET**.

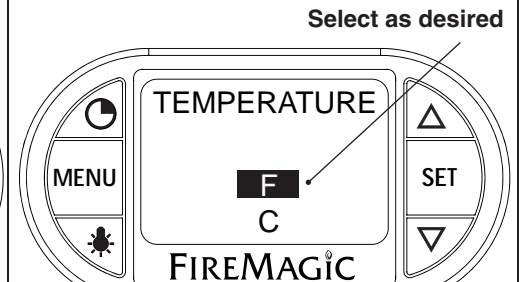

4. Select as desired & Press **SET**, screen will return to menu screen. Press **MENU** to return to default screen.