

CHOICE ACCESSIBLE KIT

Model # 24171-11

INSTALLER: Leave these instructions with consumer.
CONSUMER: Retain for future reference.



This Accessible Kit is for installation on Choice Model Grills (2020 and newer only):
C430, C540, C650, CM430, CM540, CM650

To install the Oven Hood Handle Kit:

See the separate instructions packed with the handle kit.

To install the Control Knob Kit:

1. Be sure the unit is completely cool, the control knobs are turned to the OFF position, and the gas supply is turned off.
2. Remove the existing control knobs from the grill control panel.

Note: Multi-user models have knobs locked onto the valve stems. Use the included .078" (2mm) hex key to unlock and remove the knobs. See Fig. 1-3.

3. Take the bezel locator disc and insert it into a bezel (see Fig. 1-1).
4. Remove the plastic backing from the adhesive ring found on the backside of the bezel.
5. With the red indicator line pointing upright in the twelve o'clock position, slide the bezel onto a grill valve stem with the stem penetrating through the center hole of the bezel locator disc. See Fig. 1-2.
6. Press and hold the bezel firmly against the grill control panel for 20 seconds to properly adhere the bezel.
7. Gently pry off the bezel locator disc with a small flat head screwdriver and set the disc aside to be used for the remaining bezels.
8. Take a new control knob and install it onto the valve stem with bezel.
9. If desired, the knob may be locked to the valve stem with the included .078" (2mm) hex key (see Fig. 1-3).
10. Repeat this procedure for the other knobs and bezels.

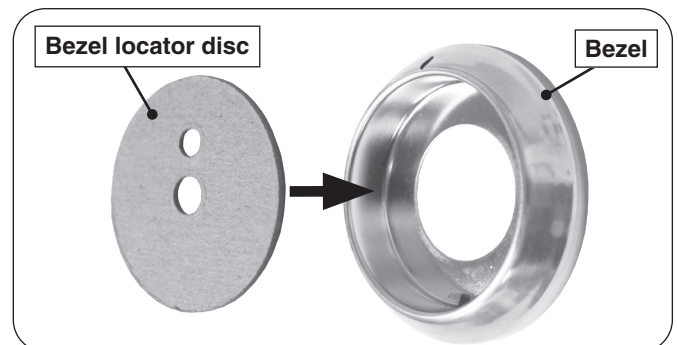 


Fig. 1-1 Insert bezel locator disc into bezel

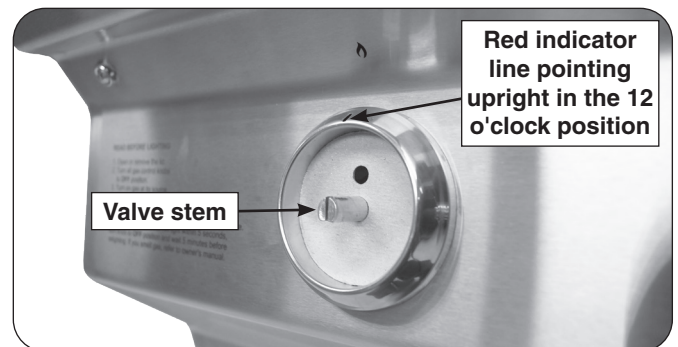 


Fig. 1-2 Install bezel onto valve stem

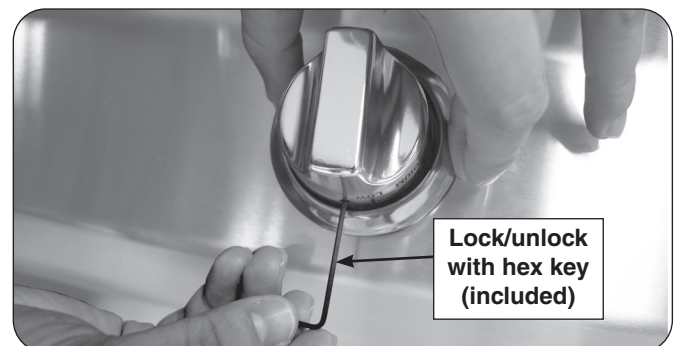 


Fig. 1-3 Lock/unlock knob

ROBERT H. PETERSON CO. • 14724 East Proctor Avenue • City of Industry, CA 91746