


## Remote Kit

Model #: 690-702

**INSTALLER:** Leave these instructions with consumer.  
**CONSUMER:** Retain for future reference.

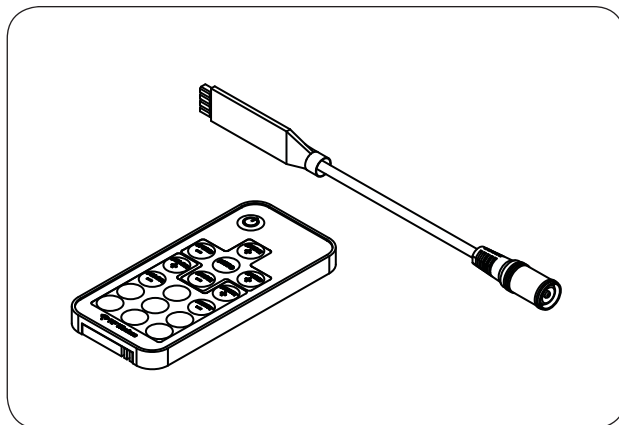

1. Ensure the unit is OFF and completely cool, the gas supply to the unit is turned OFF, and the power supply is disconnected.
2. Gain access to the remote receiver assembly (refer to the main owner's manual if needed).
3. Unfasten the bracket and remove the assembly from the unit (reference Fig. 1-1).
4. Carefully cut and remove the zip ties (see Fig. 1-2).
5. Remove the electrical tape.
6. Disconnect the remote receiver (A and B). See Fig. 1-2.
7. Connect the new remote receiver (A and B). See Fig. 1-2.

**Important:** Ensure the arrow on the receiver aligns with the arrow on the LED strip wire (see Fig. 1-3).

8. Wrap up the receiver using electrical tape.
9. Test the remote system for proper functionality. (It is ready for use; no syncing required.)
10. Use the provided zip ties to fasten the remote receiver to the bracket.
11. Fasten the bracket assembly back onto the unit.
12. Test the remote system once more for proper functionality.

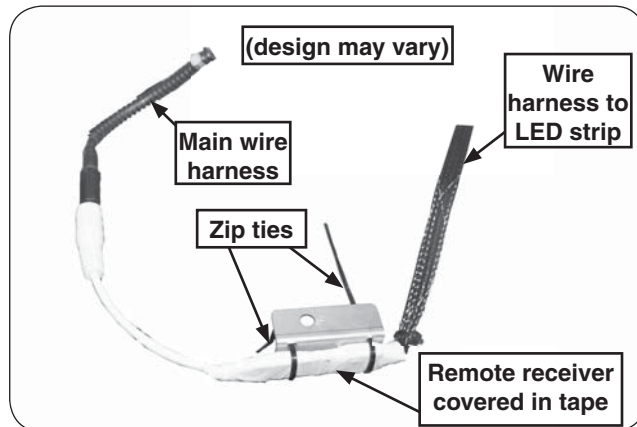


Fig. 1-1 Locate remote receiver

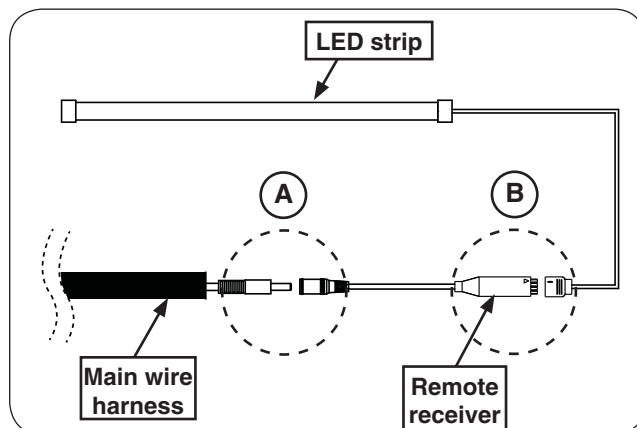


Fig. 1-2 Disconnect old remote receiver, connect new

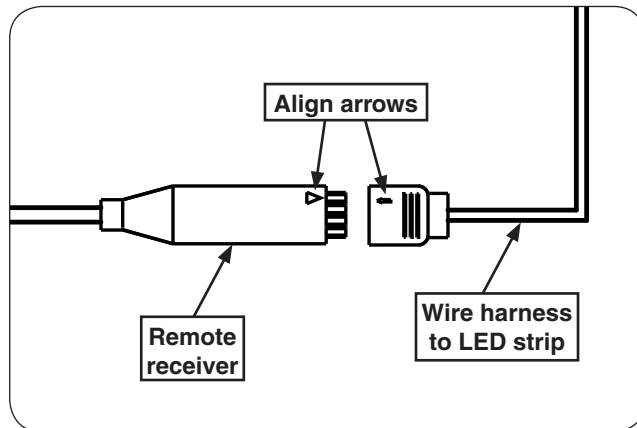


Fig. 1-3 Receiver connection detail