



GRILL & ACCESSORY COVER

Model # AOB24, AOB30, AOB36,
AOC24, AOC30, AOC36,
AOB2SB

INSTALLER: Leave these instructions
with consumer.

CONSUMER: Retain for future reference.



This cover is for use with your American Outdoor Grill product. It is constructed of a durable material that will protect your appliance when not in use.

BUILT-IN COVER AOB(24,30,36)

1. Place the cover over your unit, with the AOG logo facing forward.
2. Pull the front portion of the cover (lined with elastic) under the front face of the unit.
3. Hook the left and right straps under the notches of the unit's rear hanger. See Fig. 1-1 for an example.

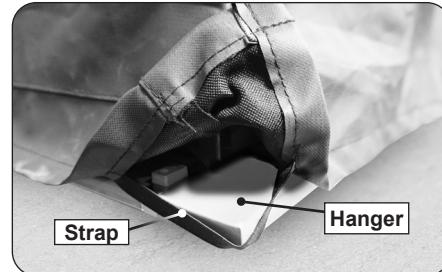


Fig. 1-1 Strap detail

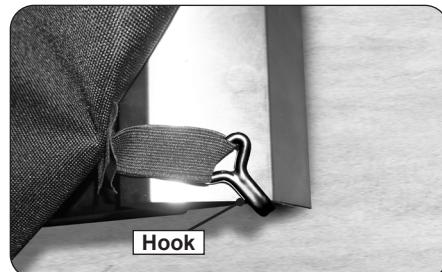


Fig. 1-2 Side burner cover hook detail

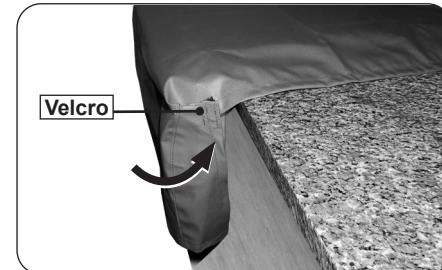


Fig. 1-3 Side burner cover
sidewall protection

4. Fold the cover top corners inward, then secure the Velcro on the left and right sides so the flaps fold over to protect the front face panel sidewalls. See Fig. 1-3.

PORTABLE COVER AOC(24,30,36)

1. Fold down the left and right shelves and place the cover over your unit with the AOG logo facing forward as shown in Fig. 1-4.
2. The cover is equipped with Velcro strips. They may be used to secure the lower skirt portion of the cover. See Fig. 1-5.



Fig. 1-4 Portable cover

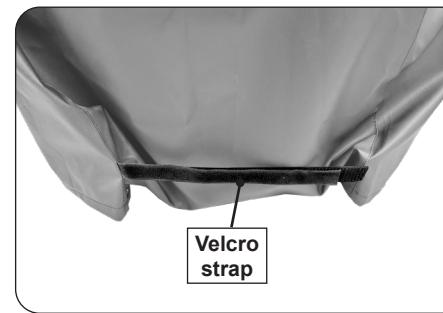


Fig. 1-5 Strap detail

CLEANING

Use mild hand soap with warm water and a sponge.

It is recommended that you wash the cover only as needed.

To prevent mold and mildew: wipe down and dry your cover with a soft towel or cloth after cleaning or rainfall.