
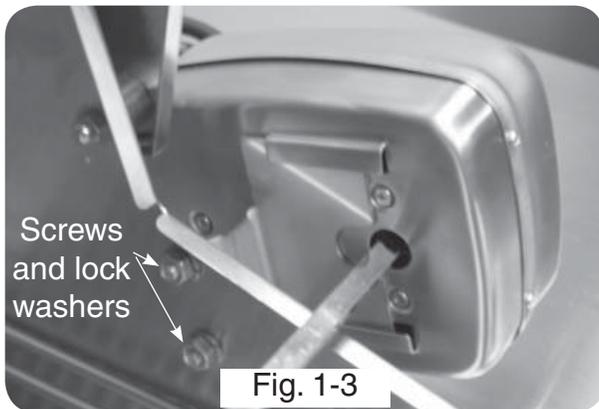
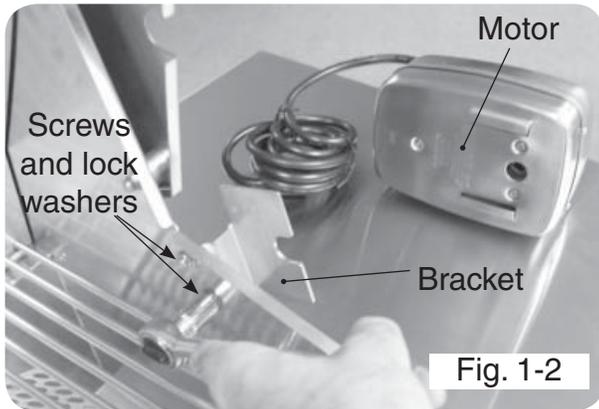


AOG Rotisserie Motor Replacement Instructions

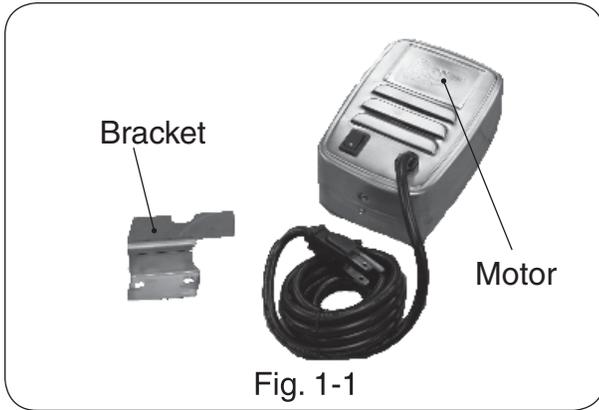

Parts:

- Stainless-Steel Rotisserie-Motor
- Bracket

Removing the old rotisserie motor

1. Remove the rotisserie rod and slide the old motor with the black plastic housing off of the metal bracket it is attached to. Unplug if necessary and store.
2. Unfasten the bracket from the barbecue frame with a $\frac{7}{16}$ (11 mm) socket or box wrench and remove it. Retain the two (2) screws, two (2) lock washers, and two (2) bolts for use with the new motor bracket.

Installing the new rotisserie motor

- A. Fasten the new bracket to the barbecue frame using using the original bolts, lock washers and nuts with a $\frac{7}{16}$ (11 mm) socket or box wrench as shown in Fig. 1-2.

Note: Fit the rectangular part of the bolt near it's head into the corresponding rectangular hole in the bracket before beginning to tighten the nut and lockwasher.

- B. Slide rotisserie motor onto new bracket as shown in Fig. 1-3.
- C. Re-attach rotisserie rod as shown.
- D. Plug the new rotisserie motor into a grounded outlet or extension cord and test it by pressing the rocker switch (see Fig 1-4) to the on position by depressing the side of the switch with the dot on it.
- E. To turn the motor off, press in the side of the rocker switch without a dot on it.

Follow the instructions that came with your barbecue to set up and operate the rotisserie.