

FIREMAGIC®

ISLAND BLENDER

Model # 3284A

INSTALLATION INSTRUCTIONS & OWNER'S MANUAL



INSTALLER: Leave these instructions with consumer.
CONSUMER: Retain for future reference.

IMPORTANT: READ ALL INSTRUCTIONS, INCLUDING THE INSTRUCTIONS PROVIDED WITH YOUR BLENDER, CAREFULLY BEFORE STARTING INSTALLATION OR OPERATION.

WARNINGS AND SAFETY CODES

Follow all information found in the owner's manual supplied with your blender.

All electrical outlets in the vicinity of the unit must be properly grounded in accordance with local codes, or, in the absence of local codes, with the *National Electrical Code, ANSI/NFPA 70*, or the *Canadian Electrical Code, CSA C22.1*, whichever is applicable.

Keep all electrical-supply cords away from any heated surface.

Electrical Grounding Instructions - This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

To protect against electric shock, do not immerse cord or plugs in water or other liquid.

Unplug from the outlet when not in use and before cleaning.

Do not operate any appliance with a damaged cord, plug, or after the appliance malfunctions or has been damaged in any manner. Contact the manufacturer for repair.

Do not let the cord hang over the edge of a table or touch hot surfaces.

Use only a properly wired and inspected 120VAC (15 AMP minimum) Ground Fault Circuit Interrupter (GFCI) GROUNDED 3-wire receptacle with this appliance.

The GFCI receptacle must be a WEATHER-PROOF IN-USE COVERED RECEPTACLE.

Never remove the grounding plug or use with an adapter of 2 prongs.

Use only extension cords with a 3 prong grounding plug, rated for the power of the equipment, and approved for outdoor use with a W-A marking.

The provisions of the National Electric Code as well as any local codes must be observed when installing the product.

MODEL SPECIFICATIONS

Specification	Value
Counter opening width	8-3/4" (21 cm)
Counter opening depth	14-1/4" (35.8 cm)
Vert. clearance below counter*	4" (15.2 cm)
Vert. clearance above counter*	25" (63.3 cm)

* minimum dimension

Table 1 - Model Specifications Table

Blender



Countertop blender housing



INSTALLATION

ELECTRICAL SETUP (if applicable)

A **120VAC (15 AMP minimum) GFCI GROUNDED 3-wire receptacle** (not included) is required within the vicinity of the appliance to provide power to the unit. The GFCI receptacle must be a **WEATHER-PROOF IN-USE COVERED RECEPTACLE**. Your individual installation may vary. **Observe the National Electric Code and all local codes.**

1. Wire the receptacle into the enclosure area. It will need to be located beneath the countertop, and within 5 feet of the blender base.
 - **Verify proper polarity of the receptacle.**
 - **If an extension cord is used, ensure it is a 3-wire GROUNDED cord that is rated for the power of the equipment, and is approved for outdoor use with a W-A marking. DO NOT use 2-prong adapters.**
 - **DO NOT TAMPER WITH THE EXTENSION CORD OR THE UNIT POWER-SUPPLY CORD.**

INSTALL BLENDER HOUSING

1. Prepare a cut-out in the countertop as specified in Table 1 and shown in Fig. 3-1.

Note: There must be a minimum of $1/4$ " overlap of the stainless-steel housing plate on all sides of the opening. The countertop must be completely level for safe and effective operation of this appliance.

2. Insert the housing into the cutout.

Note: Silicone sealant may be applied around the top edge of the countertop cut-out to create a barrier between the housing and the countertop.

PLACE BLENDER IN BLENDER HOUSING

Open the domed lid. Unpack the blender and read the instructions.

Remove the tray located in the blender housing/beneath the domed lid. Then attach the provided plastic plug to the blender electrical cord. Feed the cord through the cutout that is located at the rear of the tray opening. Be sure to snap the plastic plug in place. Then replace the tray. See Fig. 3-3. From there, route the cord through the unit and to the GFCI receptacle.

Place the blender into the tray.

See blender instructions for additional details on blender installation, use, and maintenance. Be sure to test the blender.

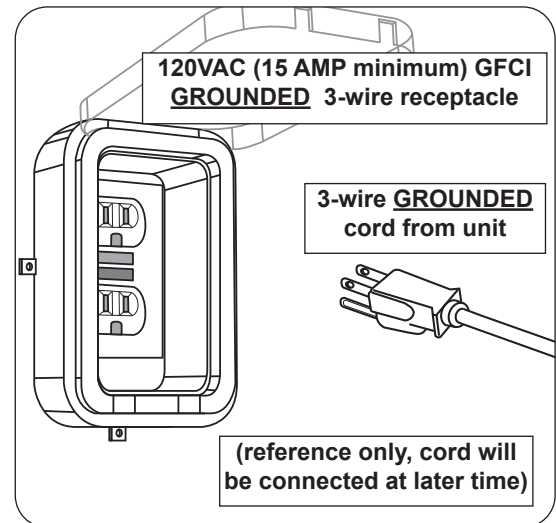 


Fig. 3-1 Electrical setup detail

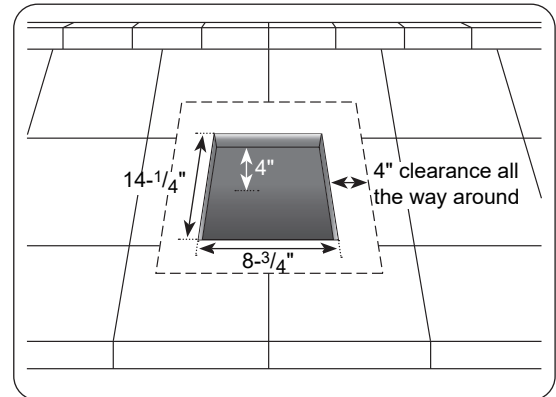 


Fig. 3-2 Cutout detail

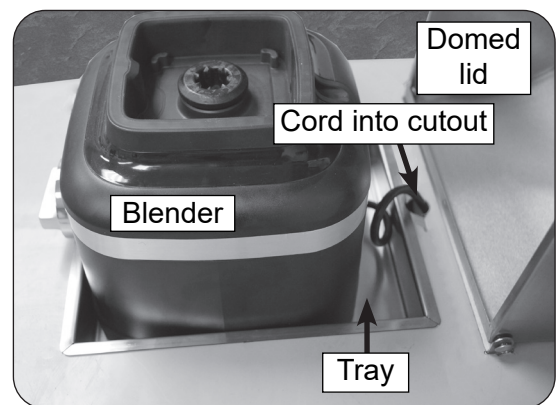 


Fig. 3-3 Place blender

SERVICING AND CLEANING

Clean the unit with a stainless-steel cleaner and a clean cloth at least once a month, following the instructions on the cleaner. Always wipe with the grain (see Fig. 4-1). You may find it useful to first remove the blender from the stainless-steel housing.

If this routine cleaning is not performed, the stainless steel may become dull and develop surface rust (due to use and atmospheric conditions). If left uncleaned, significant damage and pitting may occur.

When this unit is installed in a corrosive environment such as near the ocean (salt air), poolside (chlorine and/or pool chemicals) or any other location with exposure to high salt/chloride content or corrosive chemicals/solutions, it will be more susceptible to corrosion and MUST be maintained/cleaned frequently.

- DO NOT store any corrosive chemicals (chlorine, hydrochloric acid, fertilizer, etc.) near your unit.
- DO NOT allow any corrosive materials (masonry dust, debris, etc.) to settle on your unit.
- These environments, chemicals, and materials may cause the stainless steel to develop surface rust and consequently pitting. Under these conditions the unit MUST be cleaned at least monthly. Inspect your unit often and clean accordingly.

Cover your blender when not in use.

Note: Refer to the instructions provided with your blender for its care and cleaning.

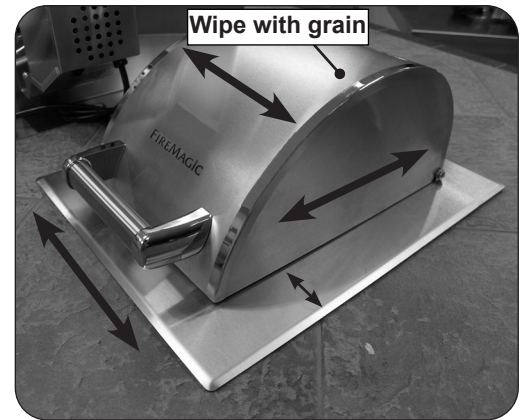 


Fig. 4-1 Wipe with grain

Please use this page to record any information that you may want to have at hand.

WARRANTY

ONE-YEAR WARRANTY - Fire Magic® electric accessories are warranted for one year from the date of purchase.

A COPY OF YOUR SALES SLIP FOR PROOF OF PURCHASE IS REQUIRED

This warranty applies to the original purchaser for products which are installed in the United States or Canada and which are operated and maintained as intended for single family residential usage. This warranty is valid only with proof of purchase, commences on the date of purchase, and terminates (both as to original and any replacement products) on the anniversary date of the original purchase of the product per the above schedules.

This warranty covers defects in material and workmanship. This warranty **does not** cover parts which become defective as a result of negligence, misuse, use not in compliance with the Installation and Owner's Manual, accidental damage, improper handling, improper storage, improper installation, **lack of required routine maintenance** (as specified in the Installation and Owner's Manual), or electrical damage. Product must be installed as specified in the Installation and Owner's Manual by a **qualified professional installer**. This warranty **does not** apply to rust, corrosion, oxidation, or discoloration unless the affected part becomes inoperable. RHP products including valves, pilots and controls, are designed and certified to be used as a system. Modifications to products which are not specifically authorized will void this warranty and could render the product to be unsafe. Burners, valves, parts, accessories, remotes, etc. used with this product must be RHP products or this warranty is void.

Warranted items will be repaired or replaced at RHP's sole discretion. This warranty **does not** cover labor or labor related charges, except as provided by separate specific written programs from RHP. All repair work must be performed by a qualified professional service person and requires prior approval of RHP.

RHP may require the defective product or part to be returned to the factory to determine the cause of failure. RHP will pay freight charges if the product or part is determined to be defective. This warranty does not cover breakage in shipment from our independent distributor to its customer if the damage is determined to have occurred during that shipment.

This warranty specifically excludes liability for **indirect, incidental**, or consequential damages. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specified legal rights, and you may have other rights that vary from state to state or province.

For additional information regarding this warranty, or to place a warranty claim, contact the RHP dealer where the product was purchased.

When contacting your RHP dealer or the R.H. Peterson Co., please provide the following information:

- Your name, address, telephone number, e-mail
- Sales receipt showing where purchased and date purchased
- Model number, serial number of product, date code
- Relevant information: installer, additions, repairs, when defect was first noted

TO REGISTER YOUR PRODUCT ONLINE GO TO: WWW.RHPETERSON.COM, AND CLICK ON PRODUCT REGISTRATION. THANK YOU FOR YOUR PURCHASE.