



LOGO COVER PLATE

Model # 24187-22

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION OR USE.



Remove Digital Thermometer

1. Ensure the appliance is completely cool, the knobs are in the off position, the gas supply to your appliance is turned off, and the power supply is disconnected (as applicable).
2. Locate the old thermometer on the grill control panel between the knobs. Remove it from the grill by slightly sliding it to the left, then lifting the right side outward until it clears the control panel.

CAUTION: Remove carefully as the wire harnesses will still be attached to the back of the thermometer.

3. Disconnect the digital thermometer harness from the grill connector (see Fig. 1-1). Insert the grill connector into the cutout and discard the thermometer with gasket.

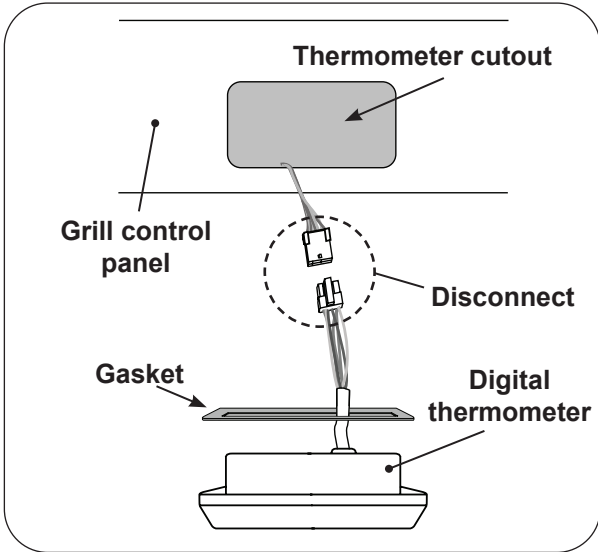


Fig. 1-1 Remove digital thermometer

Mount Cover Plate To Grill

1. Turn over the cover plate and peel off the plastic backing from the four adhesive strips.
2. Carefully align the cover plate over the exposed cutout and mount the cover plate to the grill.
3. Press and hold steadily for 15-20 seconds to ensure a proper bond.

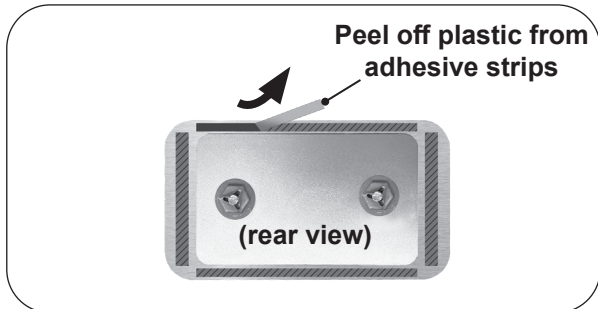


Fig. 1-2 Peel off adhesive backing

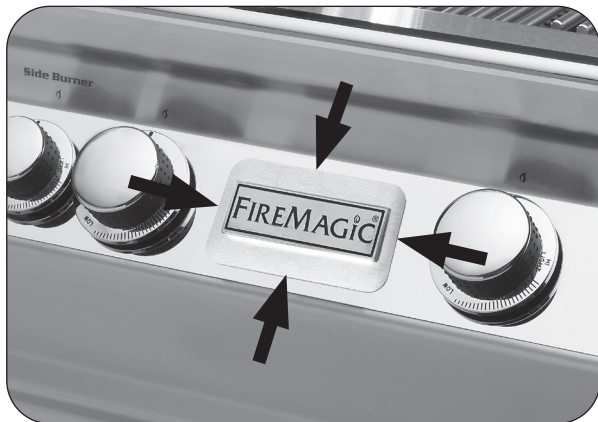


Fig. 1-3 Align and mount cover plate